MAJESIC

Model: SLT241 User 's manual



Use and Maintenance

Warnings

- Do not touch the power plug with wet hands.
- Doing so may result in electric shock.



Do not use a damaged power cord or plug or a loose outlet.

• Doing so may result in fire or electric shock.



Be sure to ground the unit.

Do not plug several devices into the same outlet.

• Doing so may cause the outlet to overheat and start a fire.



Insert the power plug fully into the outlet.

•A loose or improperly inserted power plug may result in fire.



Do not bend the power cord excessively or place heavy objects on it.

• Doing so may result in fire or electric shock.



• Failing to do so may lead to electric shock when a short circuit or overload occurs. If necessary, install a ground fault circuit breaker. Never ground to a telephone line, lightning rod, or metal gas pipe. (Doing so may result in fire, electric shock, or other hazards.)



Cautions

When disconnecting the power cord from an AC outlet, always grasp it by the plug.

•Pulling on the cord can damage the internal wire and may result in fire.



Always unplug the unit before cleaning.

 doing so may result in fire or electric shock.



The purpose of these precautions is to ensure user safety and prevent property damage.

Be sure to read and observe all safety precautions.



Contents

Names of each	part/Accessories	03
Remote control		04
First Time Inst	allation	06
Select input so	ource	07
TV MENU		07
Picture		09
Sound		10
Channel		11
Function		12
Time		13
Lock		13
Media Operatio	on	15
Android Opera	tion	16
Home		16
Settings		16
Apps		17
Network		17
Software Up	date	18
Date&Time		19
Language		19
Keyboard		19
Storage		19
Reset		20
Bluetooth		20

Names of each part



DC IN: Connect to the power adaptor.

RJ45: Connect to Router or Internet.

CVBS OUT+LINE L/R OUT: Connect to the AV OUT ports.

HDMI: Connect to the HDMI of DVD or other equipment.

RF: Connect antenna or cable 75 Ohm coaxial to receive TV signal.

OPTICAL: Connects to the Optical Audio in port of an audio device.

Common Interface: CI slot.

Mini AV: Connect it to the audio & video output terminal of DVD with the Converter cable.

: Connect to your headphone or other audio equipment

USB: Connect to USB device for multimedia and PVR.T

Position of input / output connections for guidance only.Models may vary.

03

2. 4G AIR MOUSE REMOTE CONTROL

1. Product diagram



2.Instructions

(1)Paring: Press the OK button and TV button at the same time after you have insert USB receiver into the USB port, the cursor can move swimmingly means the pairing is succeeded.

(2)Function of the key

HOME: After entering the sub-menu you can back to the original main menu directly. RETURN:You can press the Return key to put

the unit into last interface.

CURSOR LOCK: Short press to lock the cursor, and then return the cursor state.

THE BROWSER SHORTCUTS: A key to open the browser

3. Illustrated of the work status

(1)After the air mouse having paired to the terminal equipment, as the key pressed LED light shine, loosen the finger then light go out.

(2)Cursor speed regulation

From slow to fast: Press "HOME" and "VOL+" at the same time, the speed of cursor pointer is faster From fast to slow: Press "HOME" and "VOL-" at the same time, the speed of cursor pointer is slower

(3)IR learning function: Example for learning the TV "POWER" key

①Long press the TV button ,LED light will from fast flashing to slow flashing First, the smart RC enter IR learning mode.

⁽²⁾After the flying squirrel and a TV remote control have been infrared transmitter aligned, press the POWER button of the TV control, then LED of the air mouse will light, indicating that the air mouse has receive the code value that from TV remote control.

③Click the key of the air mouse that need to learn, the LED light becomes slow flashing, which means that the TV remote cotrol air mouse has received the code values. ④After the success of learning, you can press TV button to exit the learning mode, and then LED stop to light.

4. Instructions of the Keyboard Operating



The keyboard composed by the 38 keys. Backspace:Delete previous character CAPS:Caps Lock ENTER:Confirm the operation SPACE:Spacebar ALT:Numeric characters switch

5.Specification

Transmission and control:2.4G RF wireless radio-frequency technique The sensor:3-Gyro + 3-Gsensor The key number:81 keys Remote control distance : ≥10 meter The battery type: Two 7 batteries (AAA*2) The machine power consumption:Less than 10mA in the work condition Standby power consumption: in line with the European "energy star" green environmental protection standard Material:Rubber and silicone Appearance of the color:Black Dimension:172*52*19MM(two sides just 10mm thik) The machine weight: About 100g

First Time Installation

The Startup Wizard menu contains language settings and network settings.



Language settings: you can set the TV operating language.

Language	
Deutsch)
English 🔗)
Español)
Français)
Previous	Next

Network settings: you can set according to the connection, wireless network settings WIFI connection, wired connection is to set the local area network.

Ne	etwork Settin	g
	Connection Status	Connected
	IP:	192.168.0.214
	Previou	IS Next

Select Input Source



Press the "Source" button to display the input source menu, press the left or right button to select the corresponding input source, and press the Enter button to enter the relevant source.

TV MENU

Shortcuts						
A Cottings	Backlight					
Settings						
	Image	Sound	Program	Function	Time	

Press the "menu" button to display the menu, press the up and down keys to select the appropriate settings, press the right button to enter the relevant settings.

Picture

image —	Picture Mode	•	Standard 🕨 🕨
	Aspect Ratio		16:9
	HDMI Mode		VIDEO Mode
	Color Temperature		Standard
	Noise Reduction		Medium

Picture Mode: Use the menu button to call up the menu, then right click to select the "Image Mode" option, press the left and right button to switch the image mode to Standard / Movie / Vivid / User.

Aspect Ratio: You can select ZOOM1, ZOOM2, 16:9 or 4:3 with left and right keys when the option of Aspect Ratio is picked. The aspect ration will automatically change in auto mode.

HDMI Mode: Switch the image mode when play picture/video in HDMI mode.

Color temperature: Select the "Color Temperature" option according to the method mentioned above, and then use the left and right keys to adjust the color temperature to cool / normal / warm.

Noise Reduction: Press up/down key to select "Noise Reduction" option. Press left/right key to select "Off", "Low", "Medium", "High" and "Auto" to improve the picture sharpness.

Sound

◀》 Sound					
	Sound Mode		•	Standard	►
	Balance			0	
	Auto Volume			Off	
	Surround			Off	
	SPDIF Mode			РСМ	
	AD Switch			Off	
	AD Volume	_			

Sound mode: Use the up and down keys to select the sound menu, then press the right button to select the "Sound Mode" option, press the left and right button to switch the sound mode to Standard/Sports/Music/Movie/User.

Equalizer: Through the up and down keys selected "equalizer" option, and then press the OK key system will appear different bandwidth frequency level.

Balance: If the volumes of the left speaker and the right speaker are not the same, you can adjust the "Balance" to suit your personal preference.

Auto Volume/Surround: Select the "Auto Volume" option, then turn the "Auto Volume" function on or off with the left and right buttons. This method is also suitable for surround sound adjustment.

SPDIF Mode: This is used to convert the digital audio output mode. There are Auto, PCM, RAW, OFF

AD Switch: Select the "AD Switch" option, then turn the "AD Switch" function on or off with the left and right buttons

AD Volume: You can adjust the "AD Volume" to suit your personal preference.

Channel

😑 Program		
	Auto Search	
	5V Antenna Feedback	Off
	Channel Edit	
	Satellite Dish Setup	
	CI Information	
	Signal Information	

Auto Search

Select option of Auto Tuning under the up and down keys . Then press OK button and the auto tuning will begin.

DTV Manual Search

To simulate manual search, select the Channel you need to store, and also select the color and sound system. Press the up and down keys to select the "Search" option, press the left and right button to search, and you can modify the frequency by fine tuning, choose the best frequency.

Channel Edit

You can use different color buttons or function buttons to delete, hide, move, edit, and set program preferences.

	Auto Search		
Scan Mode	•	Default	►
Satellite		Astra 4A/SES	
Country Select		Australia	
Channel Type		All	
Service Type		All	
LCN Option		Off	
Search			
€ •Adjust	_oк Search	🕮 Exit	

	DTV Manu	al Search
Satellite		IA/SES 5
Transponder		3691/ 1600 H
Channel Type		All
Service Type		All
Search		
Signal Quality		
Signal Strength	ı	
DTV:	RADIO:	DATA:
¢A	djust 🔤 S	earch 🖼 Exit



Function

🖀 Function			
	OSD Time	•	15 Seconds
	Lock		
	CEC		
	PVR List		
	PVR Option		
	Blue Screen		Off
	Audio Language Setting		
	Audio Language		English
	Second Audio Language		English
	Subtitle Setting		
	Subtitle Language		English
	Second Subtitle Language		English

OSD Time: Press the "menu display time" option, through the left and right direction keys can be changed to 5 seconds, 10 seconds, 15 seconds, 30 seconds, always optional.

CEC: Press the up and down keys to select the option, and then press the OK key to open the CEC function. When CEC is turned on, you can choose to turn on or off Auto Standby, Auto Power on, ARC, Auto Standby. When the TV is turned off, the CEC device will be automatically turned off. When Auto Power on is turned on, when the HDMI connected device is turned on, the TV will automatically turn on. Open the Device list to display the connected drive device.

PVR: You can check the recording history and change PVR setting as your demand.

Blue Screen: Turn on / off no signal blue screen.

Audio Language: Select Audio Language Setting will enter the audio selection list, generally can choose Dolby and other sound effects. Audio Language can switch the first audio language through the left and right direction keys, the default is English. Second Audio Language can switch the second audio language through the left and right direction keys, the default is English.

Subtitle: Select Subtitle Setting will enter the subtitle selection list, you can switch weak listening subtitles or normal subtitles or close subtitles. Subtitle Language can be used to select the subtitle language, and Second Subtitle Language can be used to set the second subtitle language.

Reset: Select the "restore default settings" option by using the up and down keys, and then click OK to enter the next window. Can choose to confirm or cancel, choose to confirm the television will restart, the menu data will restore the initial data, choose to cancel also back to the menu interface.

Time

🗹 Time			
	Current Time	19:20:35	
	Current Time Sleep Timer	19:20:35	•
	Current Time Sleep Timer Auto Standby	19:20:35 ▲ Off 4 H	
	Current Time Sleep Timer Auto Standby	19:20:35 ▲ Off 4 H	•
	Current Time Sleep Timer Auto Standby	19:20:35 ▲ Off 4 H	
	Current Time Sleep Timer Auto Standby	19:20:35 ▲ Off 4 H	
	Current Time Sleep Timer Auto Standby	19:20:35 ▲ Off 4 H	
	Current Time Sleep Timer Auto Standby	19:20:35 ▲ Off 4 H	
	Current Time Sleep Timer Auto Standby	19:20:35 ▲ Off 4 H	

Date/Current time: This is not adjustable, when there is a signal when the automatic calibration. **Sleep time:** The system provides OFF/10/20/30/60/90/120/180/240min sleep time to choose from. **Auto Standby:** The TV will shift to Standby mode in 3H/4H/5H/OFF as you can choose.

Lock

System Lock	Off	
Channel Lock		
Channel Lock Set Password		
Channel Lock Set Password Hotel		

System Lock

Choose with the up and down keys, then open the lock function with left and right keys. Please remember that initial password is 0000. If you want to adjust password, you firstly should select option of set password and then input old password, new password. When new password you input again is correct and make sure above operation, this mean that you successfully reset password. When you want to shield some programs you don't like, please select the option of block program and input the channel number.

Hotel mode

In this mode, you can manage the opening and closing of the relevant channels, set the language, screen ratio operatio.

—				
E Hotel	Hotel Mode	•	Off 🕨	
	Key Lock		Off	
	Scan Lock		Off	
	Input Lock			
	Default Source		Off	
	Channel Type			
	Default Channel			
	Max Volume		100	
	Default Volume			
	Language			

Key lock: Press the "key lock" option to turn the menu on or off through the left and right keys.

Scan lock: Press the" Scan lock option to turn the menu on or off through the left and right keys.

Input lock: Press the " input Lock" option to turn the signal channel on or off through the left and right up and down keys.

Default Source: Press the "Default Source" option to turn the menu on or off through the left and right keys.

Channel Type: Select a channel number that is powered on by default.

Max Volume: Press to select the "max volume" option and set the parameters through the left and right keys.

Default Volume: Press to select the " default volume " option and set the parameters through the left and right keys.

Import: Insert the USB drive, place the USB drive with the relevant data files that need to set the hotel function, and click Import Data.

Export: Insert the USB drive, click the export option, and export the set hotel data to the USB drive.

Language: Press the "language" option to turn the Select the language with the up and down arrow keys.

Aspect Ratio: Press the "Aspect Ratio" option to set the parameters through the left and right keys.

Restore: Press the "Restore" option to reset the above settings.

Media Operation

Loca	ıl player			
	Picture	J Audio	Video	Installation Pa
	Available 7.06 GB Total 7.85 GB		Local Storage	Network Sharing
				Version: 9

Picture

Through the up and down keys to select the "picture" icon, press the confirmation button to confirm, and then press right to the folder, press the confirmation button to open the appropriate folder. After selecting the picture, press the confirmation key to open the picture, can carry on some operation through the left and right keys.

Music

Through the up and down keys to select the "Audio" icon, press the confirmation button to confirm, and then press right to the folder, press the confirmation button to open the appropriate folder. After selecting the Audio, press the confirmation key to open the Audio, you can make some operation through the left and right keys.

Video

Through the upper and lower keys selected "video" icon, press the confirmation key to confirm, then press right to the folder, press the confirmation key to open the corresponding folder. After the selection of the video, press the confirmation key to open the video, you can make some operation through the left and right.

Installation Package

Select the "Installation package" icon, press the enter key to confirm the entry, open the corresponding folder. After selecting the installation package, press the enter key to open and install.

USB Disk

Can read external devices, such as USB Disk.

Local Storage

The internal files of the system can be read.

Network Sharing

Access to the same segment, the server shares files.

Android Operation

Home

Press Home button to enter Smart TV interface.



The main page is designed with Zeasn UI, divided into: latest news, Featured APP, applications, music, sports. *Different regions will receive different push content

Settings



Pick the image of setting and Press OK button to appear the interface of the android setting. The following is a brief description of the function of each menu:

Set your device name

Give your device a name to help identify it when casting or connecting to it from other devices.

Network&Internet

Enter the "Network" menu item "Wi-Fi", you can open or close the Wi-Fi connection function, there are 4 types of connection: select focus and enter the password in the list of connections, use without-password protected connection, manually add hot name to connect, and point-to-point direct connection. For an Ethernet connection, insert the network cable into the network cable interface, and after identifying the network, the current ipv4 and ipv6 addresses will be displayed. Select Proxy Settings to set the proxy. IP settings can set the way to get the ip address. There are automatic acquisition or setting a static ip address.

Network & Internet		
Wi-Fi	•	
Other options		
Scanning always available Let Google's location service and other apps scan for networks, even when Wi-Fi is off	•	
Ethernet		
Connected fe80::8e23:c597:2635:223b 192.168.0.214		
Proxy settings		
IP settings		

Accounts & Sign In

Log in and manage your Google account.

Apps

View all apps and set app permissions.





Device Preferences

In the Device Preferences, you can see other settings under Android.



About: You can view and set the relevant information for the OTA update, you can also view the model, Android version, version number information.

Software Update: You can set the software local upgrade, automatically prompt to update the version, automatically upgrade the latest version, automatically download the latest version and the current version number.





Date&time:The date and time can be updated automatically based on the network or time zone, or you can turn off automatic updates and update to manual settings. You can view the currently located time zone and set the time system.

Date & time

Betransport stream-provided time

Set date

August 31, 2017

Set time

3.06 AM

Set time zone

GMT+02:00 Central European Summer Time

Use 24-hour format

1:00 PM

Language: System language can be selected here.



Keyboard: Users can be based on personal preferences of the keyboard input settings, you can also view the personal dictionary.

Storage: Here you can check the local memory capacity and current usage.





Reset: Here you can reset the unit. After reset, the data of Android system will be cleared.



Bluetooth

Enter the bluetooth setting menu for bluetooth search and pairing operation.





NOTE: Thank you for purchasing a Majestic quality TV. Our products have been designed with over 20 years of engineering excellence and are designed of the highest quality standard in the Marine and RV industry. Should you encounter any problems that cannot be easily addressed within this instruction manual please feel free to contact us at these locations:

Australia (Int'l Head Office):	073 102 3575
Canada:	416 645 7420
New Zealand:	09 415 6936
USA:	561 459 1900
UK & EU:	0207 193 1919

All other countries please email support@majesticelectronics.com

Feel free to visit our website for more updated specifications or technical support **www.majesticelectronics.com.au**