



Truma VarioHeat

(D) Gebrauchsanweisung Im Fahrzeug mitzuführen!	Seite 2	(NL) Gebruiksaanwijzing In het voertuig meenemen!	Pagina 58
(GB) Operating instructions To be kept in the vehicle!	Page 16	(DK) Brugsanvisning Skal medbringes i køretøjet!	Side 72
(F) Mode d'emploi À garder dans le véhicule !	Page 30	(S) Bruksanvisning Skall medföras i fordonet!	Sida 86
(I) Istruzioni per l'uso Da tenere nel veicolo!	Pagina 44	(E) (FIN) (N) (GR) (CZ) (SK) (P) (H) (PL) (SLO) (RUS)	Page 100

Table of Contents

Symbols used	16
Intended use	16
Safety instructions	16
Function description	19

Operating instructions

Start-up	19
Room temperature sensor	19
Truma CP plus VarioHeat digital control panel	19
Intended use	19
Safety instructions	20
Important notes	20
Air conditioning systems – shared use of IR remote control and Truma CP plus VarioHeat control panel	20
Display and control elements	20
Rotary push button	20
Back button	20
Initial start-up	20
Start-up	20
Functions	21
Select setting level	21
Switching on and off	21
Change room temperature	21
Select fan level	21
Set time switch	22
Switch lighting on / off	23
Set time	23
Service menu	23
Special displays	24
230 V mains voltage available	24
Infrared (IR) remote control (air conditioning system)	24
External control panel (CI-BUS)	24
Energy type display	24
Warning	24
Fault	24
Technical data, display	25
Maintenance	25
Truma CP classic VarioHeat analogue control panel (optional)	25
Disposing of the VarioHeat	25
VarioHeat fuse	25
Accessories	25
Technical data, heater	26
Truma Manufacturer's Warranty	26
Troubleshooting guide, Truma VarioHeat	27
Troubleshooting guide, Truma VarioHeat	28
Troubleshooting guide (air conditioning system)	29

Model

Truma VarioHeat eco
Truma VarioHeat comfort

Symbols used



The unit must only be installed and repaired by an expert.



Symbol indicates possible hazards.



Note containing information and tips.

Intended use

This unit was designed for installation in motor homes (vehicle class M1) and caravans (vehicle class O).

The equipment must not be installed in buses (vehicle classes M2 and M3) and in vehicles for transporting hazardous goods.

Safety instructions

What must I do if I smell gas?

- Extinguish all naked flames
- Open windows and doors
- Close all quick-acting valves and gas cylinders
- Do not smoke
- Do not operate any electrical switches
- Have the entire gas system checked by an expert.

A safe operating environment

- The unit may be operated only with appropriate Truma control panels and accessories.
- Danger of toxic exhaust fumes. The heater's exhaust can be toxic in enclosed spaces (e.g. garages, workshops). If the vehicle is parked in closed rooms:
 - Shut off the fuel supply to the heater.
 - Deactivate the time switch.
 - Switch the heater off on the control panel.
 - Make sure that units definitely cannot be switched on via the Truma App.
- If the cowl has been placed near or directly beneath an opening window, the device must be equipped with an automatic shut-off device in order to prevent operation with the window open.

- Heat-sensitive objects (e.g. spray cans) or flammable materials / liquids must not be stored in the same compartment where the appliance is installed because, under certain conditions, this area may be subject to elevated temperatures.
- Keep flammable materials away from the area in front of the warm air outlets. Never block the warm air outlets.
- The openings for circulated air intake, the installation compartment and the space around the unit must be kept free of obstacles so that the unit does not overheat.
- Keep the cowl for the exhaust duct and combustion air infeed free of contamination (slush, ice, leaves etc.) at all times.
- Danger from hot surfaces and exhaust gas. Do not touch the area around the wall cowl and do not lean any objects against the wall cowl or the vehicle.

Obligations of the operator / vehicle owner

- The vehicle owner is responsible for correct operation of the appliance.
- The installer or vehicle owner must affix the supplied yellow sticker with the warning information in a location in the vehicle where it is clearly visible to all users (e.g. the wardrobe door). Missing stickers can be requested from Truma.
- Liquid gas systems must comply with the technical and administrative regulations of the respective country of use (e.g. EN 1949 for vehicles in Europe). The national legislation and regulations (e.g. DVGW Work Sheet G 607 for vehicles in Germany) must be observed.
- The vehicle owner must arrange for the gas system to be tested (in Germany every 2 years) by a liquid gas expert (DVGW, TÜV, DEKRA). The test must be confirmed on the respective test certificate (G 607).
- Pressure regulating devices and hoses must be replaced with new ones no more than 10 years after their date of manufacture (every 8 years if used commercially).
- Inspect hose lines regularly and have them replaced if they are broken.

Safe operation

- The use of upright gas cylinders from which gas is **taken in the gas phase** is mandatory for the operation of gas pressure regulation systems, gas equipment and gas systems. Gas cylinders from which gas is taken in the liquid phase (e. g. for fork lifts) must not be used, since they would result in damage to the gas system.
- The operating pressure of the gas supply (30 mbar) and of the appliance (see type plate) must be the same.
- In Germany, only pressure regulating equipment that complies with DIN EN 16129 (in vehicles) with a fixed output pressure of 30 mbar may be used for the gas system. The flow rate of the pressure regulating equipment must correspond to at least the maximum consumption of all devices installed by the system manufacturer.
- For vehicles, we recommend the Truma MonoControl CS gas pressure regulation system and the Truma DuoComfort / DuoControl CS gas pressure regulation system for two-cylinder gas systems.
- At temperatures of around 0 °C and below, the gas pressure regulation system or the changeover valve should be operated with the EisEx regulator heater.
- Suitable hoses that meet national regulations must always be used in the respective country for which the equipment is destined.
- Ensure that the inside of the vehicle is sufficiently ventilated. When the unit is started up, there may be some smoke and/or smell due to dust or dirt. Especially if it has not been used for a long time.
- This appliance may be used by children from 8 years old and by persons with disabilities or with a lack of experience if they are supervised or have been instructed in the safe use of the appliance and understand the resulting risks. Children must not be allowed to play with the appliance.
- The integrity and tight fit of the exhaust double duct must be checked regularly, particularly at the end of long trips. Also check the mounting of the unit and the cowl.

Operation while driving

- Directive UN ECE R 122 stipulates that a safety shut-off device is required if motor homes and caravans are heated while driving. The Truma MonoControl CS gas pressure regulation system satisfies this requirement. Throughout Europe, a type-tested liquid gas heater may be used while driving (according to the directive UN ECE R 122) if the system includes a gas pressure regulation system with an appropriately configured gas installation. National regulations and rules must be followed.
- If **no** safety shut-off device (e.g. as contained within the Truma MonoControl CS gas pressure regulation system) has been installed, the gas cylinder must be closed when driving and **information signs** must be attached in the gas cylinder protection box and in the vicinity of the control panel.
- Liquid gas equipment must not be used when refuelling, in multi-storey car parks, in garages or on ferries.
- To prevent damage to the appliance from spray water, such as when cleaning the vehicle, do not spray water directly into the cowl.

Troubleshooting

- If you notice unusual noises or smells, close off the gas supply and switch off the appliance.
- Danger of fire / explosion if you attempt to use an appliance that has been damaged by flooding or if the vehicle has been involved in an accident. A damaged appliance must be repaired by an expert or be replaced.
- Have faults repaired by an expert without delay.
- Only carry out repairs yourself if the solution is described in the troubleshooting guide of this operating instructions.

- Following a deflagration (backfire), have the appliance and the exhaust duct checked by an expert.

Maintenance / Repairs / Cleaning

- The unit may only be repaired and cleaned by an expert.
- Maintenance, repairs and cleaning must not be done by children.
- Guarantee claims, warranty claims and acceptance of liability will be ruled out in the event of the following:
 - Modifications to the device (including accessories),
 - Modifications to the exhaust duct and the cowl,
 - Use of replacement and accessory parts other than original Truma parts,
 - Failure to follow the installation and operating instructions.

The device's operating permit, and consequently also the vehicle's operating permit in some countries, are also rendered void.

Function description

VarioHeat is a warm air heater for air circulation to heat camping vehicles quickly. The burner is fan-assisted, which ensures that operation is problem-free, even when on the move. The unit automatically selects the required operating level according to the temperature difference between the setting on the control panel and the current room temperature. A boost function for quick heating and a night function for low-noise operation are also available. The various fan settings allow air circulation mode without heating.

The digital control panel can be used to select other functions such as time switch or operation of a Truma air conditioning system. Information on this can be found under Truma CP plus VarioHeat digital control panel

This unit always starts up at the lowest setting. If this is not sufficient to achieve the desired temperature inside the vehicle, the unit switches to a higher operating level within a few minutes.

Operating instructions

Always observe the operating instructions and the “Important operating notes” prior to starting! The vehicle owner is responsible for correct operation of the appliance.

The installer or vehicle owner must affix the yellow sticker with the warning information, which is enclosed with the appliance, in a location in the vehicle where it is clearly visible to all users (e.g. the wardrobe door). Missing stickers can be requested from Truma.

Start-up

- Remove the cowl cover.
- Open the gas cylinder and the quick-acting valve in the gas supply line.
- Switch on the heater, see.

**Truma CP plus VarioHeat digital control panel or
Truma CP classic VarioHeat analogue control panel**

If the appliance is not used for a long period, place on the cowl cover and close the quick-acting valve in the gas supply line and the gas cylinder.

Room temperature sensor

To measure the room temperature, an external room temperature sensor is located in the vehicle. The position of the sensor is determined by the vehicle manufacturer depending on the vehicle model. More information can be found in the operating instructions for your vehicle.

 


Figure 1

The temperature setting on the control panel depends on personal heating requirements and the design of the vehicle, and must be determined individually.

Truma CP plus VarioHeat digital control panel

Intended use

The Truma CP plus VarioHeat control panel is used to control and monitor a Truma VarioHeat heater and / or a Truma air conditioning system.

The following air conditioning systems can be operated with the Truma CP plus VarioHeat¹:

- Saphir compact²
- Saphir comfort RC
- Aventa eco
- Aventa comfort

Truma CP plus VarioHeat for the

Truma air conditioning systems Aventa eco, Aventa comfort (from serial number 24084022 – 04/2013), Saphir comfort RC and Saphir compact (from serial number 23091001 – 04/2012)

The Truma CP plus VarioHeat is intended for installation in caravans and motor homes.

¹ And Truma CP plus VarioHeat CI-BUS for CI-BUS – not retrofittable.

² From serial number 23091001. In combination with a Truma VarioHeat heater, a “control panel cable coupling” is essential between the air conditioning system and the heater. Order the “control panel cable coupling” separately. Not in conjunction with a TG 1000 sinus power inverter.

Safety instructions

- Operate the Truma CP plus VarioHeat control panel only if it is in a technically perfect condition.
- Repairs must be carried out immediately. Only carry out repairs yourself if the solution is described in the troubleshooting guide of this operating instructions.
- Do not carry out any repair work or modifications on the Truma CP plus VarioHeat control panel.
- A defective Truma CP plus VarioHeat control panel may only be repaired by the manufacturer or the manufacturer's service department.
- Never use LP gas appliances when refuelling, in multi-storey car parks, in garages, or on ferries. Switch off the LP gas appliance on the Truma CP plus VarioHeat control panel.

Important notes

- If the power supply to the system has been interrupted, the time / time switch must be reset.
- If a new or replacement appliance (heater, air conditioning system) is connected to the bus system, the procedure described in "Initial start-up" must be repeated.

Air conditioning systems – shared use of IR remote control and Truma CP plus VarioHeat control panel

- Even after connecting the Truma CP plus VarioHeat control panel, the IR remote control is available for controlling the air conditioning system. The Truma CP plus VarioHeat control panel recognises all settings that are made using the IR remote control on the air conditioning system. The IR remote control only transmits the settings that are shown in its display (no bidirectional communication).
- Only the time switch of the Truma CP plus VarioHeat control panel may be used to clearly define the start and end time of a required period.

Display and control elements

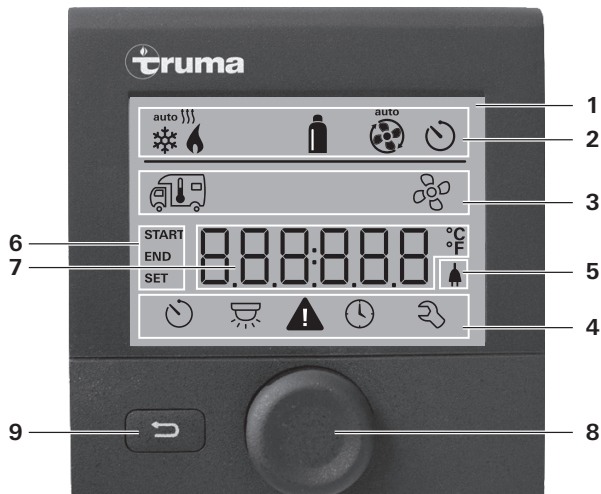


Figure 2

- 1 = Display
- 2 = Status bar
- 3 = Menu bar (upper)
- 4 = Menu bar (lower)
- 5 = 230 V mains supply indicator (power)
- 6 = Time switch display
- 7 = Settings / Values
- 8 = Rotary push button
- 9 = Back button

The menus can be selected in lines (3 + 4) and settings can be made using the rotary push button (8). The display (1) has an illuminated background. The Back button (9) can be used to return from a menu.

Rotary push button


Setpoints and parameters can be selected and modified using the rotary push button (8) and saved by tapping on it. Selected menu items flash.



Rotate clockwise

- Menu is run through from left to right.
- Increase values (+).

 Figure 3



Rotate anticlockwise

- Menu is run through from right to left.
- Decrease values (-).

Figure 4



Tapping

- Accept (save) a selected value.
- Select a menu item, switch to setting level.

Figure 5

Long press

- Main switch function ON / OFF.

Back button

Pressing the Back button (9) returns you from a menu and discards settings. This means that the previous values are retained.

Initial start-up

In order to perform the initial start-up, the following steps are required:

- Switch on power supply.
12 V direct voltage for the Truma CP plus VarioHeat and Truma VarioHeat control panel, or the 230 V mains voltage for the air conditioning systems.
- Start the search of the appliances under the menu item "Service menu" -> "RESET" -> "PR SET".

After confirmation, the Truma CP plus VarioHeat control panel initialises itself. "INIT .." appears on the display while this is in progress. The devices that have been found are stored in the control panel.

Start-up

Start / Stand-by screen

After connecting the Truma CP plus VarioHeat control panel to the power supply, a start screen is displayed after a few seconds.



Figure 6

- The display changes between the time and the set room temperature.
- Special displays on command via IR remote control of the air conditioning system or CI-BUS (see "Special displays" on page 24).
- After a repair / retrofit, the procedure described under "Initial start-up" must be repeated.

Functions

The functions in the menu bars (3, 4) of the Truma CP plus VarioHeat control panel are selectable in any order. The operating parameters are shown on the status bar (2) and on the displays (5, 6).

Select setting level

- Tap the rotary push button.

The display shows the setting level. The first icon flashes.

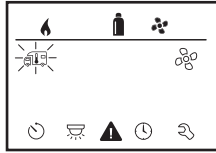


Figure 7

Switching on and off

Switching on

- Tap the rotary push button.

i Previously set values / operating parameters are reactivated after switching on.

Switching off

- Press rotary push button for longer than 4 seconds.

i The Truma CP plus VarioHeat control panel deactivation procedure can be delayed by several minutes because of internal heating or air conditioning system after-runs ("OFF" is shown on the display during this time).



Change room temperature

- Select icon in menu bar (3) with rotary push button.
- Change to the setting level by tapping on it.
- Select between heating system (HEATER) or air conditioning system (AC) using the rotary push button, depending on the unit connected.
- Tap rotary push button to confirm selection.
- Select desired temperature with rotary push button.
- Tap the rotary push button to confirm the value.

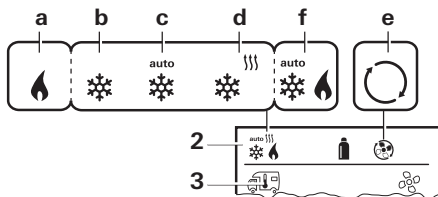


Figure 8

Heater (HEATER)

settable temperature range 5 – 30 °C (1 °C increments)

a = Heater on – Symbol lights up, the symbol flashes until the room temperature is reached.

Air conditioning system (AC)

settable temperature range 16 – 31 °C (1 °C increments)

b = COOL – Air conditioning system is switched on

c = AUTO – Air conditioning system is set to automatic

d = HOT – Air conditioning system is in heating mode.

e = VENT – Air conditioning system is in air circulation mode

i Quick temperature change using rotary push button possible (in stand-by screen).



Select fan level

With connected heating / air conditioning system

- Select icon in menu bar (3) with rotary push button.
- Change to the setting level by tapping on it.
- Select desired fan level with rotary push button.
- Tap the rotary push button to confirm the value.

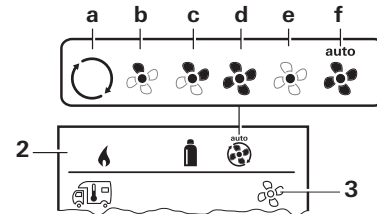


Figure 9

Heater (HEATER)

Icon	Operating mode	Description
–	OFF	Fan is switched off. (only selectable if no appliance is in operation).
a	VENT ¹	Air circulation if no appliance is in operation. 10 speed settings available.
b	ECO	Automatic control of the fan, depending on the heating power / optimised to the current heating requirement
d	BOOST ²	Rapid room heating Available if the difference between the selected and actual room temperature is >10 °C
e	NIGHT	Heater running only at partial load. Might not be possible to reach the set room temperature (depending on the vehicle size and outside temperature).

¹. Can cause greater motor wear, depending on the frequency of use.

². Fan level "BOOST" results in higher power consumption, higher noise level and increased motor wear.

i As soon as the heater is switched on (room temperature selected), the status bar (2) displays the fan level that was selected during the previous heating procedure. The factory setting is "ECO".

Air conditioning system (AC)

Icon	Operating mode	Description
–	OFF	Fan is switched off (only selectable if no appliance is in operation).
a	–	–
b	LOW	Low fan level
c	MID	Medium fan level
d	HIGH	High fan level
e	NIGHT	Ultra-quiet fan operation
f	AUTO	Automatic fan level selection. Cannot be changed in AUTO mode.



Set time switch



Danger of toxic exhaust fumes.

The activated time switch switches on the heater even when the vehicle is parked. The heater's exhaust can be toxic in closed spaces (e.g. garages, workshops).

If the vehicle is parked in closed rooms:

- Shut off the (gas) fuel supply to the heater.
- Deactivate the time switch of the Truma CP plus VarioHeat control panel (OFF).
- Switch off the heater at the Truma CP plus VarioHeat control panel.



- When air conditioning systems are being operated, the time switch of the Truma CP plus VarioHeat control panel must only be used to clearly define the start and end time for a required period of time.
- If the time switch has been activated (ON), the deactivate time switch menu is displayed first (OFF).

- Select icon in menu bar (4) with rotary push button.
- Change to the setting level by tapping on it.

Enter start time

- Set the hours then the minutes with the rotary push button.

24 h mode

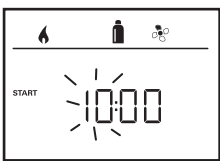


Figure 10

12 h mode

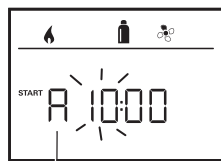


Figure 11

A = a. m.
P = p. m.

Entering the end time

- Set the hours then the minutes with the rotary push button.

24 h mode

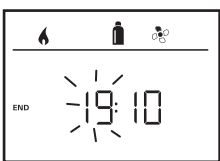


Figure 12

12 h mode

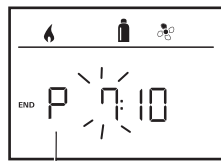


Figure 13

A = a. m.
P = p. m.



If the start/end point was exceeded during entry, the operating parameters are not taken into consideration until the next start/end point has been reached. Until then, the operating parameters that have been set outside the time switch remain valid.

Set room temperature

- Depending on the unit that is connected, select the heater or air conditioning system using the rotary push button
- Tap rotary push button to confirm selection.
- Select required room temperature with rotary push button.
- Tap the rotary push button to confirm the value.

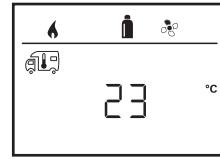


Figure 14

Select fan level

- Select desired fan level with rotary push button.
- Tap the rotary push button to confirm the value.

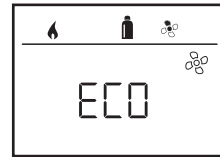


Figure 15

Activate time switch (ON)

- Activate time switch with rotary push button (ON).
- Tap the rotary push button to confirm the value.

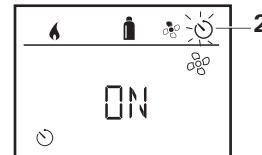


Figure 16



- The time switch remains active until it is deactivated (OFF), even for several days.
- If the time switch is programmed and active, the time switch icon flashes.

Deactivate time switch (OFF)

- Change to the setting level by tapping on the rotary push button.
- Deactivate time switch with rotary push button (OFF).
- Tap the rotary push button to confirm the value.



Figure 17



Switch lighting on / off

Available when air conditioning system is connected

Aventa comfort or
Aventa eco

- Select icon in menu bar (4) with rotary push button.
- Change to the setting level by tapping on the rotary push button.
- Select required function with rotary push button.

1 – 5 – Switch lighting on.
Brightness selectable in 5 levels.

OFF – Switch lighting off.

- Tap the rotary push button to confirm the value.


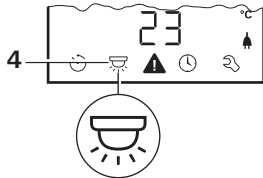


Figure 18




Set time

Display, 24 h mode

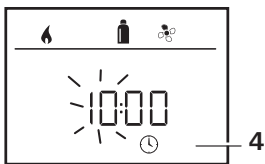

Display, 12 h mode

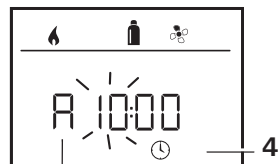

A = a. m.
P = p. m.

Figure 19

Figure 20

- With the rotary push button (8), select the "Set time" symbol in the menu bar (4).

The hour display flashes.

- Set the hours with rotary push button (8).
- The minutes display flashes when the rotary push button (8) is tapped again.
- Set the minutes with rotary push button (8).
- Tap the rotary push button (8) to confirm the value.



Service menu

1. Calibrating the room temperature sensor of the heater (OFFSET)

The room temperature sensor of the heater can be individually adjusted to the sensor's installation situation. The setting can be made in increments of 0.5 °C within the range of 5 °C to -5 °C.



Example:
Set room temperature 23 °C;
OFFSET = -1 °C;
– Setpoint value for heater = 22 °C

Figure 21

Presetting: 0 °C (Celsius).

2. °C / °F temperature display

Select the temperature display °C (Celsius) or °F (Fahrenheit).

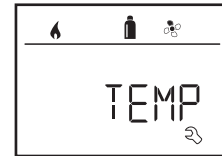


Figure 22

Presetting: °C (Celsius).

3. Changing the background lighting

Change the background lighting of the Truma CP plus VarioHeat control panel in 10 increments.



Figure 23

4. 12 h / 24 h mode

Display time in 12 h (a. m., p. m.) / 24 h mode.



Figure 24

Presetting: 24 h mode.

5. Change language

Select the desired language (German, English, French, Italian).

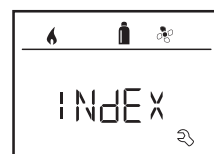


Figure 25

Presetting: English

6. Showing the version number

Display the version number of the heater, air conditioning system, Truma CP plus VarioHeat control panel.



Example:
H 1.20.01 -> H = Appliance; 1.20.01 = Version number

Appliance

P = Truma CP plus VarioHeat control panel

A = Air conditioning system

H = Heater

Figure 26

7. Presetting (RESET)

The Reset function sets the Truma CP plus VarioHeat control panel back to the factory setting. This deletes all settings. Newly connected units are recognised and stored in the control panel.

- Switch on the power supply
 - 12 V direct voltage for the Truma CP plus VarioHeat and Truma VarioHeat control panel or
 - 230 V mains voltage for air conditioning systems.

Perform Reset

- Select "RESET" with the rotary push button (8).
- Tap on the rotary push button (8).
- "PR SET" appears in the display.
- Tap the rotary push button (8) to confirm.



Figure 27

After confirmation, the Truma CP plus VarioHeat control panel initialises itself.

"INIT .." appears on the display while this is in progress.

Special displays

230 V mains voltage available

The icon signals that 230 V mains power supply is available.

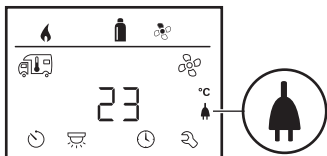


Figure 28

- i** Icon appears only in conjunction with a Truma air conditioning system.

Infrared (IR) remote control (air conditioning system)

When a command is sent via the infrared remote control of the air conditioning system, "IR" appears in the display.

External control panel (CI-BUS)

When a command is sent via an external control panel with CI-BUS, "CI" appears in the display.

- i** The Truma CP plus VarioHeat control panel CI-BUS is the company's own variant that is configured only at the factory.

Energy type display

- The energy type gas (a) is displayed in heating mode

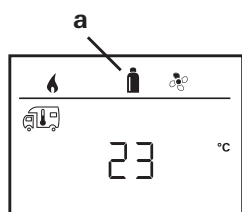


Figure 29



Warning

This symbol indicates that an operating parameter has reached an undefined state. In this case the appliance concerned continues to operate. As soon as the operating parameter is within the target range again, this symbol goes off again automatically.


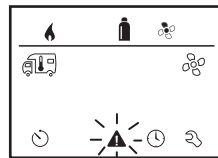


Figure 30

Read out code of warning

- Select icon with rotary push button.
 - Tap the rotary push button.
- The current warning code will be displayed. The cause of the warning can be determined and remedied with the aid of the troubleshooting guide (from page 28 and ff).

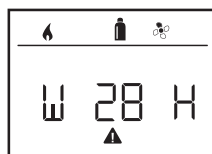

W = Warning
28 = Fault code
H = Appliance
H = Heater
A = Air conditioning system

Figure 31

Cause eliminated / return to the setting level

- Tap the rotary push button.


Cause not eliminated / return to the setting level

- Press the Back button.

- i** In this case, the warning in the Truma CP plus VarioHeat control panel is not acknowledged and the warning symbol remains. The affected appliance remains in warning status. Other connected appliances can be operated.

Fault

In the event of a fault, the Truma CP plus VarioHeat control panel immediately jumps to the "Fault" menu level and displays the fault code of the fault. The cause of the fault can be determined and remedied with the aid of the troubleshooting guide (from page 28 and ff).

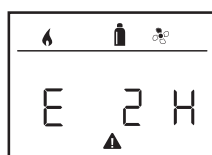

E = Fault
2 = Fault code
H = Appliance
H = Heater
A = Air conditioning system

Figure 32

Cause eliminated / return to the setting level

- Tap the rotary push button.
- The respective appliance is restarted.

- i** This can take several minutes because of internal after-runs of connected appliances.

If the cause has not been remedied, the fault will occur again and the control panel will jump to the "Fault" menu level again.

Cause not eliminated / return to the setting level

- Press the Back button.

- i** In this case, the fault in the Truma CP plus VarioHeat control panel is not acknowledged and the warning symbol remains. The appliance remains in fault state. Other connected appliances can be operated.

Technical data, display

Display	LCD, monochrome, with background lighting
Dimensions (L x W x H)	92 x 103 x 40 mm
Operating temperature range	-25 °C to +60 °C
Storage temperature range	-25 °C to +70 °C
Interfaces	
Truma CP plus VarioHeat	TIN bus
Truma CP plus VarioHeat CI-BUS	TIN bus, CI BUS
Power supply	8 V – 16.5 V
Current consumption at rated voltage 12 V	max. 65 mA (100 % background lighting) 6.5 mA – 10 mA (stand-by)
Quiescent current consumption	max. 3 mA (Off)
Weight	approx. 100 g



Subject to technical changes.

Maintenance

The Truma CP plus VarioHeat control panel is maintenance-free. In order to clean the front panel, use a damp, non-scouring cloth. If this is not sufficient, use a neutral soap solution.

Truma CP classic VarioHeat analogue control panel (optional)

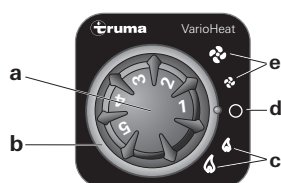


Figure 33

- a = "Heating" control knob
Green LED "Operation"
Red LED "Fault / Warning"
- b = Rotary switch
- c = "Heating" rotary switch
Large flame symbol "eco"
Small flame symbol "night"
- d = Rotary switch "Off"
- e = Rotary switch "Vent"
Full load (large symbol)
Partial load (small symbol)

eco

Automatic control of the fan, depending on the heating power / optimised to the current heating requirement

night

Heater running only at partial load. Might not be possible to reach the set room temperature (depending on the vehicle size and outside temperature).

Switch the heater on

- Set the desired room temperature at the control knob (a).
- Set the rotary switch (b) to the desired output (c).

Switch the ventilation on

- Set the rotary switch (b) to the desired output (e).

Switching off

Set the rotary switch (b) to the centre(d). If the heater is turned off after heating, the fan may still run to utilise the residual heat.

Green LED "On" (beneath control knob)

When the device is on (heating or ventilation), the green LED must light up (the fan is on). If the LED does **not** light up, check the (main) switch if necessary. Please observe the respective vehicle manufacturer's instructions.

Red LED "Fault / warning"

If there is a fault / warning, the red LED flashes. In each case, the fault is reset by switching off and then switching back on again. Following a reset, it can take some time until the green LED lights up again.

A flashing code is output in the event of a fault / warning. The **Truma CP classic VarioHeat troubleshooting guide** enables the cause and remedy to be determined.

Maintenance

The Truma CP classic VarioHeat control panel is maintenance-free. In order to clean the front panel, use a damp, non-scouring cloth. If this is not sufficient, use a neutral soap solution.

Disposing of the VarioHeat

The appliance must be disposed of in accordance with the administrative regulations of the respective country in which it is used. National regulations and laws (in Germany, for example, the End-of-Life Vehicle Regulation) must be observed.

VarioHeat fuse

The device fuse is located on the electronic control unit and can only be changed by an expert.

Device fuse (F1):
10 AF – quick – (EN 60127-2-3)

The fine fuse must always be replaced with a fuse of the same type.

Accessories

Cowl cover

39141-00 creamy white
39141-01 black
39141-02 bianco

Technical data, heater

Determined in accordance with EN 624 or Truma test conditions

Type of gas

Liquid gas (propane / butane)

Operating pressure

30 mbar (see type plate)

Rated heat output (gas consumption)

Truma VarioHeat eco

1300 W (100 g/h) / 2800 W (220 g/h)

Truma VarioHeat comfort

1300 W (100 g/h) / 2800 W (220 g/h) / 3700 W (290 g/h)

Additional information according to EN 624

Truma VarioHeat eco

$Q_n = 3.1$ kW (Hs); 230 g/h; C_{13} ; $I_{3B/P}$

Truma VarioHeat comfort

$Q_n = 4.1$ kW (Hs); 300 g/h; C_{13} ; $I_{3B/P}$

Destination countries

BE, BG, RO, DK, DE, EE, FI, FR, GB, GR, HR, IS, IE, IT, LV, LT, LU, MT, NL, NO, AT, PL, PT, SE, CH, SK, SI, ES, CZ, HU, CY, TR, AL, MK

Air delivery volume

Truma VarioHeat eco

75 / 155 m³/h

Truma VarioHeat comfort

75 / 155 / 210 m³/h

Power consumption at 12 V

Truma VarioHeat eco

0.65 / 2.75 A

Truma VarioHeat comfort

0.65 / 2.75 / 5.4 A

Quiescent current consumption

with Truma CP plus VarioHeat

0.004 A

with Truma CP classic VarioHeat

0.001 A

Weight

Heater without peripheral devices:

5.5 kg



CE product ID number

CE-0085CR0203

E1 10R-058062

Subject to technical changes.

Dimensions (all dimensions in mm)

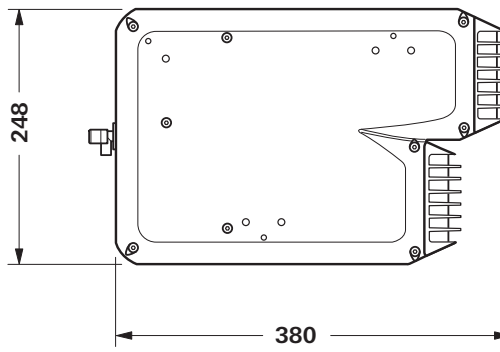


Figure 34

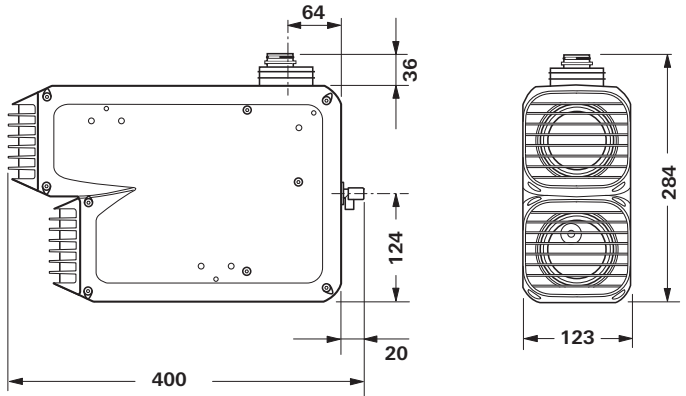


Figure 35

Manufacturer's Warranty (European Union)

1. Scope of Manufacturer's Warranty

As the Manufacturer of the unit, Truma undertakes a warranty towards the Consumer that covers any material and/or manufacturing defects of the unit.

This Warranty is applicable in EU member states as well as in Iceland, Norway, Switzerland and Turkey. A Consumer is the natural person who was the first one to purchase the unit from the Manufacturer, OEM or dealer and who neither resold the unit in a commercial or self-employed professional capacity nor did he or she install it for a third party in such a capacity.

The Manufacturer's Warranty covers any of the aforementioned defects that occur within 24 months upon concluding the purchase agreement between the seller and the Consumer. The Manufacturer or an authorised service partner undertakes to remedy such defects through subsequent fulfilment, i.e. at its discretion either by repairing or replacing the defective item. Any defective parts shall become the property of the Manufacturer or the authorised service partner. If the unit is no longer manufactured at the time of defect notification and if replacement delivery has been opted for, then the Manufacturer may deliver a similar product.

If the Manufacturer remedies a defect under its warranty commitment, the term of the Warranty shall not recommence anew with regard to the repaired or replaced parts; rather, the original warranty period shall continue to be applicable to the unit. Only the Manufacturer itself and an authorised service partner shall be entitled to conduct a warranty job. Any costs that occur in the event of a warranty claim shall be settled directly between the authorised service partner and the Manufacturer. The Warranty does not cover additional costs arising from complicated removal or installation jobs on the unit (e.g. dismantling of furnishings or parts of the vehicle body), and neither does it cover travel expenses incurred by the authorised service partner or the Manufacturer.

No further-reaching claims shall be permitted, especially damage claims presented by the Consumer or third parties. This provision shall not affect the validity of the German Product Liability Act (Produkthaftungsgesetz).

Neither does the voluntary Manufacturer's Warranty affect the Consumer's legally applicable claims for defects towards the seller in the relevant country of purchase. In individual countries there may be warranties that can be issued by the relevant dealer (official distributor, Truma Partner). In such cases the warranty can be implemented directly through the dealer from whom the Consumer bought the unit. The warranty regulations of the country in which the unit was purchased by the Consumer for the first time shall also be applicable.

2. Warranty exclusions

No warranty claim shall be applicable under the following circumstances:

- Improper use, contrary to the specified use
- Improper installation, assembly or commissioning, contrary to operating or installation instructions
- Improper operation, contrary to operating or installation instructions, particularly maintenance, care and warning notes
- Instances where repairs, installations or any other procedures have been conducted by non-authorised partners
- Consumable materials and parts which are subject to natural wear and tear
- Installation of replacement, supplementary or accessory parts that are not original Manufacturer's parts and which have thus caused a defect
- Damage arising from foreign substances (e.g. oils, plasticisers in the gas), chemical or electrochemical influences in the water, or cases when the unit has come into contact with unsuitable substances (e.g. chemical products, unsuitable cleaning agents)
- Damage caused by abnormal environmental or unsuitable operating conditions

- Damage caused by force majeure or natural disasters or any other influences not within Truma's responsibility
- Damage resulting from improper transport

3. Making a warranty claim

The warranty must be claimed with an authorised service partner or at the Truma Service Centre. All the relevant addresses and phone numbers can be found at www.truma.com, in the "Service" section.

To ensure a smooth procedure, we should be grateful if you could have the following details ready before contacting us:

- Detailed description of the defect
- Serial number of the unit
- Date of purchase

The authorised service partner or the Truma Service Centre will then specify the further procedure. To avoid transport damage, the affected unit must only be shipped upon prior arrangement with the authorised service partner or the Truma Service Centre.

If the warranty claim is recognised by the Manufacturer, then the transport expenses shall be borne by the same. If no warranty claim is applicable, the Consumer will be notified accordingly and any repair and transport expenses shall then be the Consumer's liability. We must ask you not to send in a unit without prior arrangement.

Troubleshooting guide, Truma VarioHeat

Fault	Cause	Remedy
# 2	Flame not recognised: <ul style="list-style-type: none"> – Gas cylinder or quick-acting valve in the gas supply line closed – Gas pressure regulation system iced up – Butane content in the gas cylinder too high – Combustion air infeed or exhaust outlet is sealed 	<ul style="list-style-type: none"> – Check gas supply and open valves – Use EisEx regulator heater – Use propane (butane is unsuitable for heating, particularly at temperatures below 10 °C) – Inspect openings for obstructions (slush, ice, leaves, etc.) and remove any obstructions
# 7	– Room temperature sensor not connected or cable defective	– Contact Truma Service
# 11	– Temperature cutout has been triggered	– Contact Truma Service
# 25	– Overvoltage > 16.4 V	– Check the battery voltage and voltage sources such as the charger
# 26	– Low voltage, battery voltage too low < 10 V	– Charge battery and replace old battery if necessary
# 27	<ul style="list-style-type: none"> – Warm air outlets blocked – Circulated air intake blocked – End outlets EN closed up 	<ul style="list-style-type: none"> – Remove blockage – Remove blockage – Open end outlets EN
# 28	– Open window above cowl (window switch)	– Close window
# 29	– Risk of low voltage, battery voltage too low < 10.4 V	– Charge battery
# 32	– Motor wear limit will be reached soon	– Contact Truma Service
# 255	<ul style="list-style-type: none"> – No connection between heater and control panel – Control panel cable or main fuse defective 	– Contact Truma Service

If these measures do not remedy the fault or if fault codes are displayed that you cannot find in the troubleshooting guide, contact Truma Service.

Troubleshooting guide (air conditioning system)

Fault code	Cause	Remedy
# 1	Failure (short circuit or broken cable), room temperature sensor	Contact Truma Service
# 2	Ice sensor failure – internal	Inspect the filter and replace it if necessary
# 4	Ice sensor failure – external (if present)	Keep the air inlets / outlets on the roof free of obstructions such as leaves
# 8	IR receiver unplugged or cable broken	Contact Truma Service

If these measures do not remedy the fault or if fault codes are displayed that you cannot find in the troubleshooting guide, contact Truma Service.

Troubleshooting guide, Truma VarioHeat

Flashing code at the analogue CP classic control panel

Flashing sequence - On / Off	0.5 seconds
Pause between flashing sequence	5 seconds

Fault	Cause	Remedy
LEDs do not light up, appliance is switched on, operating voltage present	– Automatic restart is blocked, e.g. after a power failure	– Reset (fault reset) by switching off, wait for 5 seconds and then switch on again
No LED illuminates after switching on	– No operating voltage – Device fuse or vehicle fuse defective	– Check 12 V battery voltage, charge battery if necessary – Check plug connections – Check fuse of appliance or vehicle and replace if necessary
The green LED lights up after switching on, but the heater does not operate	– The temperature set on the control panel is lower than the room temperature	– Select a higher room temperature on the control panel
Red LED flashes 1 x (approx. 30 seconds after the heater is switched on)	– Gas cylinder or quick-acting valve in the gas supply line closed – Gas cylinder empty – Gas pressure regulation system iced up	– Check gas supply and open valves – Replacing a gas cylinder – Use EisEx regulator heater
After operating for a longer period of time, the heater switches to fault	– Butane content in the gas cylinder too high – Combustion air infeed or exhaust outlet is sealed	– Use propane (butane is unsuitable for heating, particularly at temperatures below 10 °C) – Inspect openings for obstructions (slush, ice, leaves, etc.) and remove any obstructions
Red LED flashes 2 x	– Heater fault	– Contact Truma Service
After the heater is switched on, the green LED is lit and the red LED flashes 3 x .	– Risk of low voltage, battery voltage too low < 10.4 V – Low voltage, battery voltage too low < 10 V – Overvoltage > 16.4 V	– Charge battery – Charge battery and replace old battery if necessary – Check the battery voltage and voltage sources such as the charger
Red LED flashes 4 x	– Open window above cowl (window switch)	– Close window
Red LED flashes 5 x	– Warm air outlets blocked – Circulated air intake blocked	– Remove blockage – Remove blockage
Red LED flashes 6 x	– Motor wear limit will be reached soon	– Contact Truma Service

If these measures do not remedy the fault or if fault codes are displayed that you cannot find in the troubleshooting guide, contact Truma Service.