



Frameless Smart TV with Built-in DVD Quick Start Guide

24" Model - Part No.: 053442 (AUS)/ Part No.:053443 (NZL)

32" Model - Part No. 053653 (AUS)

Please read this manual carefully before TV operation.

Retain it for future reference.

PREFACE

1. Read this Quick Start Guide before starting Set-up.
2. Follow the instructions carefully and adhere to all WARNINGS.
3. DO NOT remove the TV back cover or block the TV ventilation openings.
4. DO NOT use the TV near water or heat Source.
5. DO NOT pinch or cut the Power Cord.

Note:

The product and illustrations in this user's manual is only for explanation purposes and may vary depending on model.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

WARNING

Never place a television in an unstable location. The television may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:



- Using cabinets or stands recommended by the TV manufacturer.
- Only use furniture that can safely support the TV.
- Ensure the TV is not placed at/over the edge of the furniture.
- DO NOT place the TV on high furniture (for example, cupboards or bookcases) without anchoring both the furniture and the TV to a suitable support.
- DO NOT place a cloth or other materials between the TV and furniture
- DO NOT allow children to climb on furniture to reach the TV or its controls

If your existing TV is being relocated, the same considerations as above must be applied.

The plug or appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

1. Unpack the TV and Accessories from the Carton Box

1. Please see the unpacking instructions on the top of the carton box (and below).
2. DO NOT apply pressure on the TV screen at all times.
3. Check the carton box carefully for all included items and accessories.

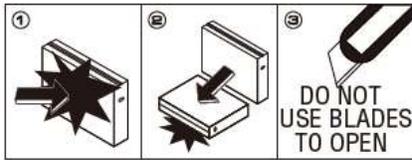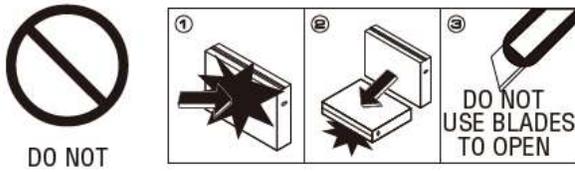

For 27" - 58"



For 27" - 58"



2. Package Contents

- > 24" or 32" LED Television with built-in DVD player
- > Magic Remote Control with 2 x AA batteries included
- > DVD Player Remote Control with battery included



- > Quick Start Guide
- > 240V power adapter
- > MINI AV Wire
- > 12V cigarette lighter plug
- > TV stand and mounting screw
- > Warranty Card

3. What You Will Need for Set-up (Not Included)

- Philips Head Screwdriver
- Internet Connection (For Smart TV Streaming)
- Wireless Router (For Smart TV Streaming)
- Computer, Tablet or Smart Phone (For Smart TV Set-Up)

4. Attach the Table Stands

HOW TO install the TV stand

If you need to remove or assemble the TV stand, please read and follow the instructions below.

1. Before installing / removing the stand, check and ensure TV is turned off.
2. Place the TV screen on a protection cover to prevent any unwanted damages.


Installation instructions:

Put the television on the table, fix the TV stand with the two screws provided.

Step 1: Fasten the base plate with the 2 screws Provided.


Step 2: Fasten the assembled base plate into the mounting holes located at the back of the TV.

- To remove the TV stand, perform the above steps in reverse order.

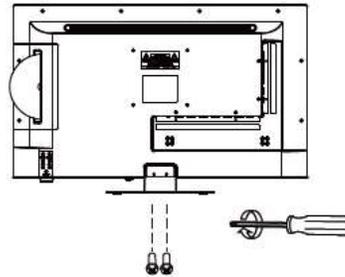

5. Front panel

The buttons on the lower-right panel control your TV's basic features, including the on-screen menu. To access the advanced features, use the magic remote control.

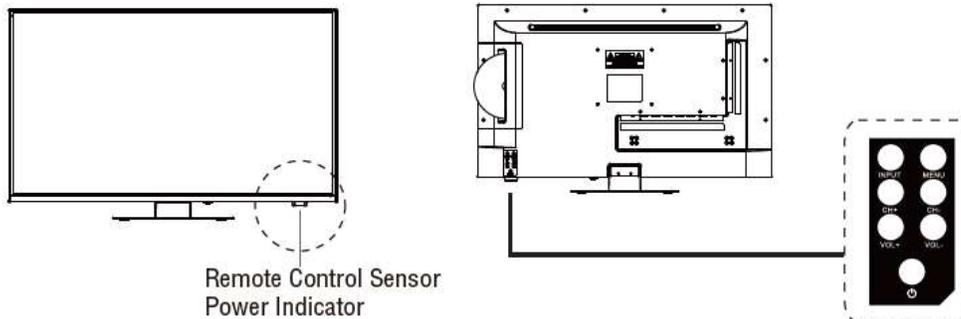

6. Specifications

| | | | |
|----------------------|------------------|----------------------------------|----------------------------------|
| Model | | 053442/053443 | 053653 |
| Display size | | 24" Diagonal (max.) | 32" Diagonal (max.) |
| LED panel resolution | | 1920X1080 | 1920X1080 |
| Speaker output power | | 3Wx2 | 5Wx2 |
| Power supply | | 12V/3A | 12V/5A |
| Standby consumption | | ≤0.5W | ≤0.5W |
| Antenna input | | 75 ohms | 75 ohms |
| Controller power | | DC 3V (Two AA size batteries) | DC 3V (Two AA size batteries) |
| Dimensions | TV with stand | W542xD349xH110(mm) | W722xD458xH170(mm) |
| | TV without stand | W542xD318xH42(mm) | W722xD420xH45(mm) |
| Net weight | TV with stand | 3.1kg | 6.8kg |
| | TV without stand | 2.9kg | 6.6kg |
| Work temperature | | 0°C-40°C | 0°C-40°C |


NOTES:

- Design and specifications are subject to change without notice.
- Weight and Dimension shown are approximate.

7. Connect The TV

1. Insert the female end of the Power Cord into the back of the TV.
Then carefully plug the standard AC plug end into a 240V AC outlet.
2. If you are connecting other devices to the TV, use the correct cables and connect to the ports available on the bottom or side of TV back panel.




Location of Connections

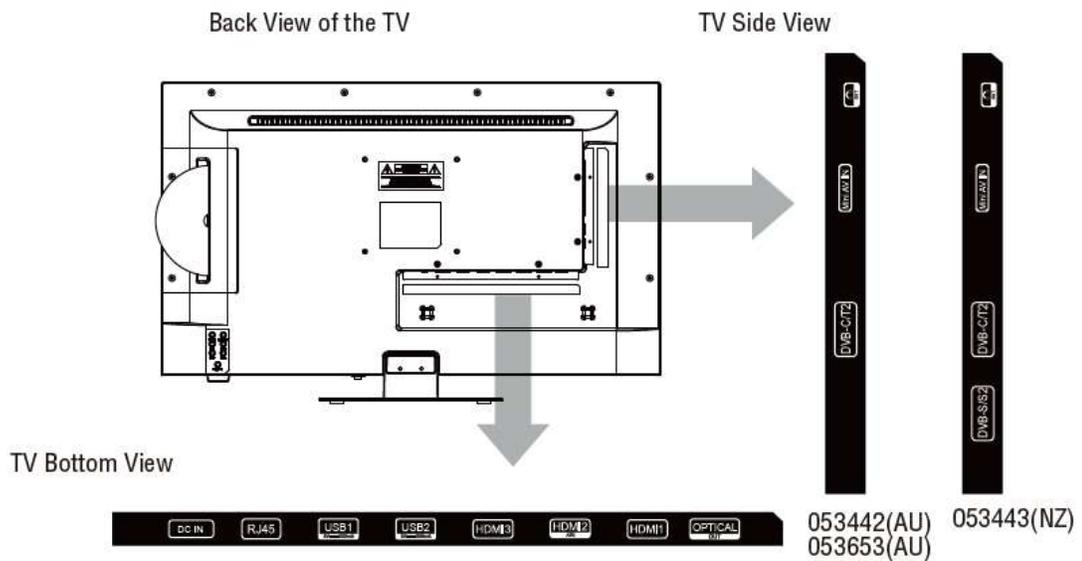


8. Prepare The Remote Control

Remove the battery cover and insert the provided batteries. Then replace the battery cover.

Installing Batteries

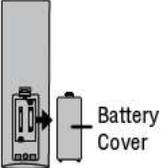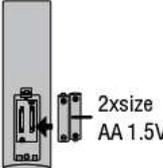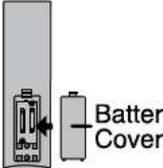- 1 Open the battery compartment cover on the back side.
 Battery Cover
- 2 Insert two 1.5VAA size batteries in correct polarity. Don't mix old or used batteries with new ones.
 2xsize AA 1.5V
- 3 Closed the cover.
 Battery Cover

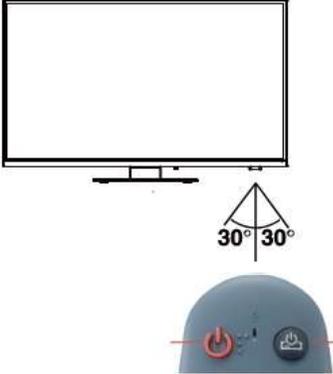

30° 30°

- ✦ Point the remote towards the remote control sensor of the TV and use it within 8 meters.
- ✦ Put the used batteries into the recycling bin since they can negatively affect the environment.

Note:

- 1) Batteries should last approximately one year under normal use (actual use will vary).
- 2) If the TV will remain inactive for an extended period of time, remove the batteries from the remote control to avoid possible damage due to leakage.
- 3) Do not mix old and new batteries or different types of batteries.
- 4) Do not throw batteries into fire or water.
- 5) The batteries (battery pack or batteries installed) should not be exposed to excessive heat.

Remote



1. **POWER:** To switch the device on or standby
2. : Set-Top-Box On/Off
3. **NUMBER KEYS:** Direct program selection
4. : Channel list
5. **0/ QUICK/ACCESS:**
 - Brief: Number key 0
 - Hold: Quick Access

6. :
 - Brief: Screen remote
 - Hold: Audio description On/Off
7. : Disable or enable the sound
8. +/-: Adjust the volume level
9. ▲/▼ : Channel selection
10. : Activate Voice assistant
11. : Smart Functions
12. : Quick Settings
13. **Mouse / OK:**
 - **Mouse** ▲/▼ : Scroll pages & Channel change
 - **OK:** Confirm selection
14. **ARROW KEYS:** Move within the menu
15. **GUIDE:** Electronic Program Guide
16. **BACK:** Return to the previous menu / Exit the menu
17. **NETFLIX:** Open Netflix
18. : Input picker
19. **PRIME VIDEO:** Open Prime Video
20. **Color buttons:**
 - Menu: Menu function as displayed
 - TV Teletext mode: Open further teletext pages directly
21. **MOVIES:** Call Movies from the Internet
22. :
 - TV mode: Live Play back
 - USB mode: Play
23. : Pause

DVD remote control



| | |
|---------------|-----------------------------------|
| POWER (red) | Switch DVD mode on/off |
| EJECT (green) | Ejects the DVD |
| SETUP | DVD mode settings |
| MENU | Opens the main menu |
| GOTO | Function key |
| NUMBER KEYS | For entering e.g. program numbers |
| ▶▶ | Start / Pause |
| ■ | Stop |
| ◀◀ / ▶▶ | Play Forward / Backward |
| ◀◀ / ▶▶ | Previous chapter / Next chapter |
| OK | Confirm selection |

To play a DVD, please use the DVD remote control provided. You can use it to switch to DVD mode or back to TV mode via the power button on the DVD remote control.

In addition, the device automatically switches to DVD mode when you insert a DVD.

Operation in DVD mode depends on the data structure on the DVD.

For example, an original purchased movie will immediately switch to the main overview for playback.



Warning: Contains button or coin cell battery.
Hazardous if swallowed – see instructions.



Note:

To put the DVD remote control into operation, please remove the battery contact foil by pulling it out.

9. Trouble Shooting

Having trouble?

Don't worry, it's usually an easy fix.

| | |
|--|---|
| After Auto Tuning only some channels are available | Check your area is covered by Digital TV Broadcasts. Try re-tuning or manually tuning missing channels. Check that you are using the correct antenna type. |
| Channel cannot be selected | Check if the channel has been blocked in the main menu settings. |
| USB not playing | Please check connecting USB cable and power supply is connected. Hard drive has not been formatted. Please make sure USB disk is compatible and the multimedia data formats are supported. |
| Picture is distorted, macroblock, small block, dots, pixelization, etc | Compression of video contents may cause distortion especially on fast moving pictures such as sports and action movies. |
| Noise from speaker | Check cable connections, make sure a video cable is not connected to an audio input. Low signal level may cause sound distortion. |
| TV turns off automatically | Check if the Off Timer is set to On in the Setup menu. Sleep Timer may have been enabled. If there is no signal for about 10 minutes from an input, the TV will turn off. |
| TV turns on automatically | Check if the On Timer is set to On in the Setup menu. |
| Picture is not shown in full screen | Black bars on each side will be shown on HD channels when displaying SD (4:3) contents. Black bars on Top & Bottom will be shown on movies that have aspect ratios different from your TV. Adjust picture size option on your external device or TV to full screen. |

Warranty

This product is covered under a 24 months warranty period. Kindly refer to the warranty policy terms and conditions available on Camec website.

For further information or assistance, please contact our National Customer Support Team or visit Camec website.

1. Australia on 1300 422 632 or camec.com.au
2. New Zealand on 09 257 2419 or camec.co.nz

For any retail or trade enquiries, please contact any of our Sales office.

| | |
|---|---|
| CAMEC VICTORIA 47-63 Remington Drive Dandenong South VIC 3175 23-27 Freight Drive Somerton VIC 3062 Phone: 1300 422 632 | CAMEC NEW ZEALAND 44 Montgomerie Road Mangere Auckland 2022 Phone: (09) 2572419 |
| CAMEC NEW SOUTH WALES Units 2 & 3 No. 1 Koonya Circuit Caringbah NSW 2229 Phone: (02) 9525 2588 | CAMEC QUEENSLAND Building 3 Archerfield Industrial Park Cnr Kerry & Beaudesert Road Archerfield QLD 4108 Phone: (07) 3710 9000 |
| CAMEC WESTERN AUSTRALIA 190 Welshpool Road Welshpool WA 6106 Phone: (08) 9351 0044 | |