


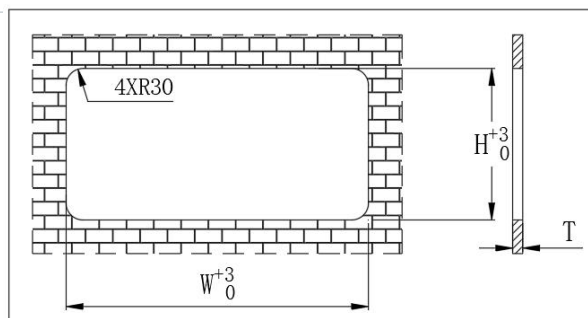


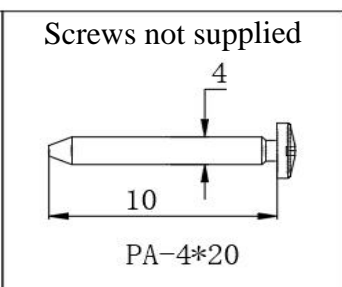


Plastic Hatch Door
➤ Installation and Operational
Instructions

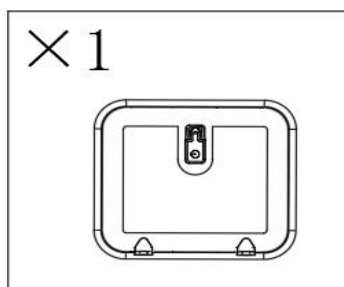

Product code: RSD

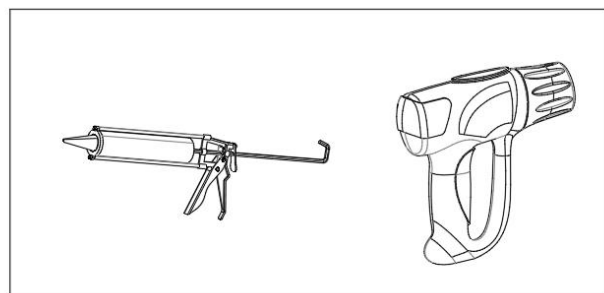


Cut-out Size:

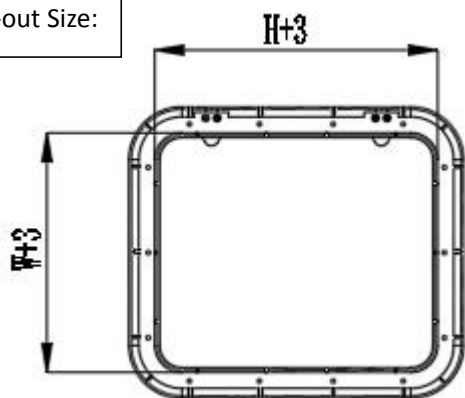


Model and specification	Overall dimensions (mm)	Cut-out Size H*W (mm)	Weight (kg)	Color
RSD001	410*360	345*292	1.3	Black/White
RSD002	710*410	645*345	2.8	Black/White
RSD003	808*356	745*295	2.9	Black/White
RSD004	707*510	644*444	4.05	Black/White
RSD005	633*568	572*507	3.1	Black/White


Installation step 1: Applying sealant to the contact surfaces of the hatch door and the wall

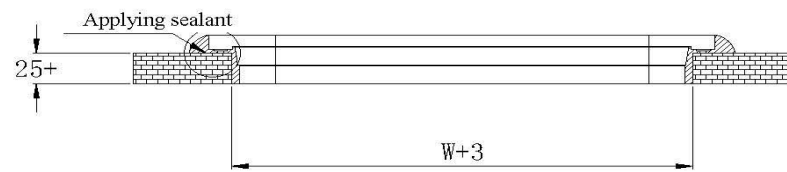

Installation step 2: Installing the hatch door

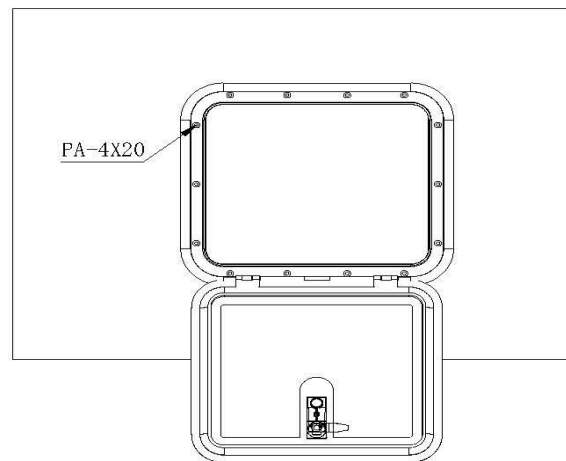

Usage

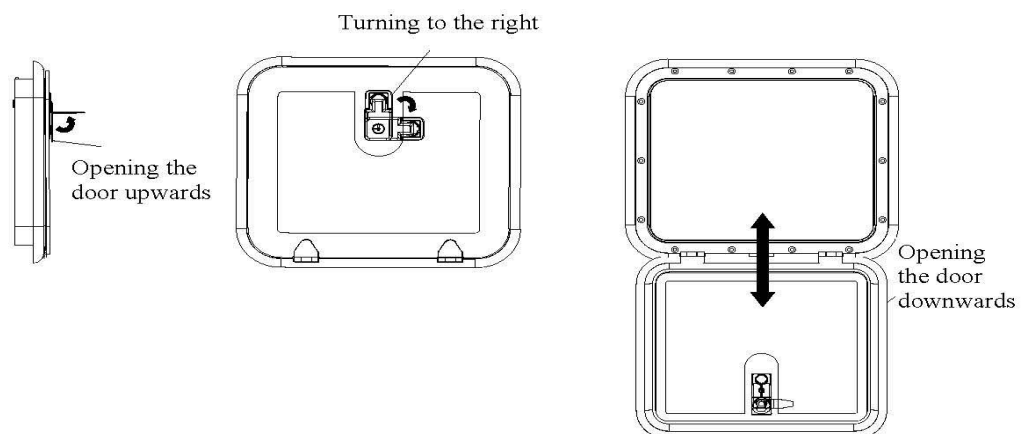

Plastic Hatch Door Installation and Operational Instructions

1. Read the installation instructions carefully before installation.
Improper installation may cause physical injury or property loss.
2. Before making the cutout in the car wall, check that there are no wires or other obstacles within the area for the cutout.
3. Before installing the product, please check that the cut-out size matches the product size.
4. Before installing the plastic hatch door, please check that there are no sharp edges, obvious pits, bumps and other defects around the cutout and near the installation area.
5. When assembling the plastic hatch door, please do apply enough sealant to the glue slot of the outer frame to prevent water leakage.
6. If there is any problem with the hatch door, please contact the dealer.