

MILENCO

WRAITH WHEEL LOCK

INSTRUCTIONS FOR INITIAL SET UP WHEEL BOLT FITMENT

Tools Required:

19mm Socket
Torque Wrench

- 1 - Remove one Caravan Wheel bolt and replace with supplied Security Wheel Bolt receiver.
- 2 - Using The Torque Wrench, tighten the Security Wheel Bolt to caravan's manufacturers torque specification.

Wheel Lock Adjustment

The Wraith Wheel Lock requires a one off adjustment for optimum fitment for individual wheel sizes. This is achieved by following these simple steps.

- 1 - Using the supplied Allen Key, turn grub screw one turn anti clockwise, this allows the lock shaft to rotate for adjustment.
- 2 - Turn the lock shaft anti clockwise to its maximum length.
- 3 - Insert key and turn clockwise to unlock.
- 4 - Locate lock shaft onto security wheel bolt receiver, a flush fit of the lock body to the wheel surface is required. If adjustment is needed, remove lock from the wheel bolt receiver and rotate the lock shaft clockwise to shorten until a minimal gap between lock body and wheel surface is achieved.
- 5 - Turn grub screw clockwise to lock shaft. Set up is now complete.