


Ranger Windows

Below you will find a list of instructions and guidelines which you must follow to ensure the longevity of the product.

- 1) We recommend adding 4mm to the cut out dimensions (eg: 1000 x 800 window cut out dimensions should be 1004 x 804 mm).
- 2) Remove the black rubber seal on the inside edge of the external black frame. We recommend bonding the window in with adhesive instead of using the rubber seal.
- 3) Apply adhesive around the inside of the external frame. We recommend using Bostik Elastic Adhesive or caravan adhesive sealant. Using the supplied brackets and hex nuts, secure the external frame to the wall and **gently** tighten the hex nuts. It is vital that you do not over tighten the hex nuts as this can cause pressure on the frame and result in damage.

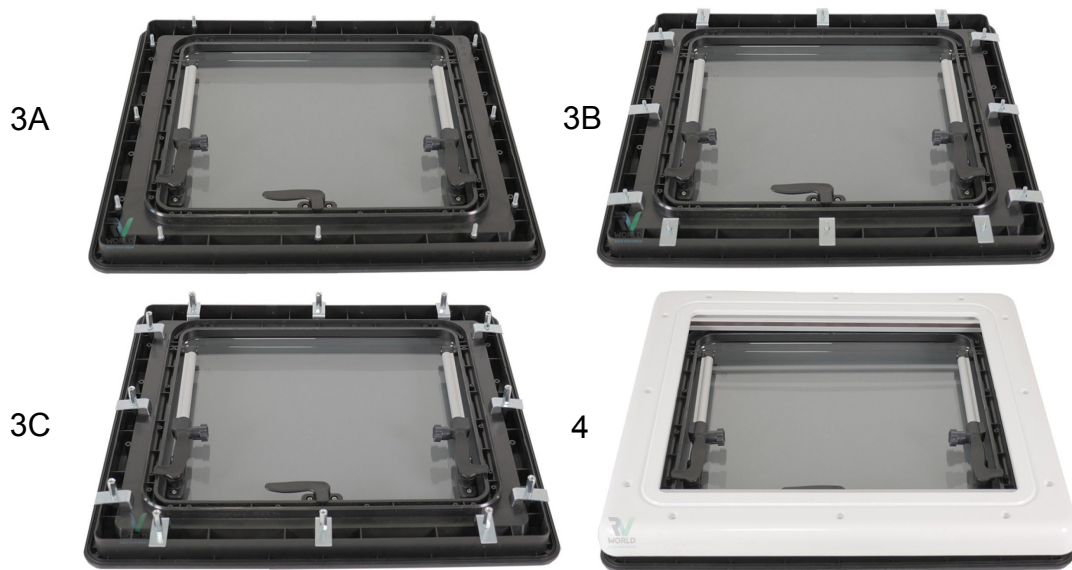

3B Notes: Right angle brackets should clamp in a horizontal position. Ideal wall thickness approximately 30mm.



4) Line up the internal frame with the hex nuts. Ensure the blind is positioned at the bottom of the window and the fly screen is at the top. Gently screw the internal frame to the hex nuts with the supplied screws. Again it is vital you do not over tighten these screws as the blind will not function as it should.

5) Cover the screw holes with the supplied insert covers.

6) Remove the clear protection film on the acrylic window blade and clean the windows with a damp microfiber cloth and water. No chemicals should be used to clean the windows

Please note, we do not recommend leaving the blind/fly screen shut together during storage. This is due to the possibility of the magnets 'welding' together if left shut for very long periods.