


**THULE**<sup>®</sup>  
SWEDEN

**Adapter Series 6 for  
Mercedes Sprinter and Volkswagen**

**> Instructions**

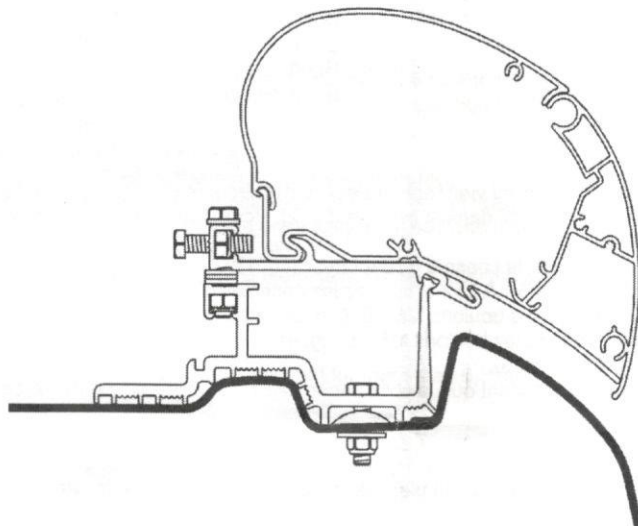

# Adapter Series 6 for Mercedes Sprinter and VW Crafter

Prod.nr. 308073  
6T926-4



## ANWENDUNG

Adapterset für die Montage der Thule Omnistor 6200 auf dem Mercedes Sprinter model 2006 oder Volkswagen Crafter.

## INHALT DES SETS

- Adapter 115 mm .....	1	- Bolzen DIN 933 - M6x25.....	5
- Adapter 500 mm .....	2	- Muttern DIN 985 - M6 .....	11
- Adapterfüsse 100 mm .....	1	- Unterlegscheiben DIN 125 - M6.....	29
- Adapterfüsse 500 mm .....	2	- Unterlegscheiben DIN 9021 - M6.....	5
- Bolzen DIN 933 - M6x35 .....	6		

## MONTAGE

1. Die Adapterfüsse werden auf dem Dach geleimt. Dort wo schon fabrikseitig Montagepunkte vorgesehen sind, können die Adapterfüsse nochmals extra festgeschraubt werden. Bohren Sie dafür ein Loch mit Ø7 in den Adapterfüsse (fig. 2). Für die exacte Position des Adapters, siehe die Montageanleitung der Markise.
2. Bringen Sie auf der gerippten Fläche des Adapterfüsse Klebmasse SIKA 252 an (Fig. 1).
3. Montageflächen erst sorgfältig entfetten. Montieren Sie den Adapterfüsse.
4. Schieben Sie die Adapter auf die Adapterfüsse. Befestigen Sie alles mit den Bolzen M6x35, Unterlegscheiben und Muttern (Fig. 3).
5. Installieren Sie die Markise an die Adapter und sichern Sie diese mit den Bolzen M6x25 (Fig. 4).
6. Die vertikale Positionierung erfolgt mit den unterlegscheiben M6 (Fig. 5).
7. Lassen Sie die Klebmasse vor Gebrauch der Markise 48 Stunden trocknen. Lassen Sie während des Austrocknens des Leimes die Markise ± 5 cm offen stehen, um einer möglichen Verdrehung des Gehäuses vorzubeugen.

## BEMERKUNGEN

- Um die Fahrzeugwand nicht zu beschädigen, die Markise nie mehr als 50 cm ausfahren, ohne vorher die Stützfüsse aufzustellen.
- Kontrollieren Sie regelmäßig die Befestigung der Adapter auf dem Fahrzeug.

## SONDERZUBEHÖR

- Omni-Gutter 3,50m (art.nr. 307947) oder 4,50m (art.nr. 307967).



Read these instructions carefully. No guarantee will be allowed for wrong installation.

## APPLICATION

Adapter set for installation of the Thule Omnistor 6200 awning on Mercedes Sprinter model 2006 or Volkswagen Crafter.

## CONTENTS OF SET

- Adapter 115 mm .....	1	- Bolt DIN 933 - M6x25 .....	5
- Adapter 500 mm .....	2	- Nut DIN 985 - M6 .....	11
- Foot 100 mm.....	1	- Washer DIN 125 - M6 .....	29
- Foot 500 mm.....	2	- Washer DIN 9021 - M6 .....	5
- Bolt DIN 933 - M6x35 .....	6		

## INSTALLATION

1. The adapter feet are to be glued onto the roof. Where they come above a hole in the roof, the feet can be fixed complementary with a bolt M6x25. Drill Ø7holes in the feet at these spots (fig. 2). For the exact position of the adapter plates, see installation instruction of the awning.
2. Put SIKA 252 glue on the ribbed surface of the adapter feet (fig. 1).
3. Remove the grease from the roof with SIKA activator and fix the adapter feet.
4. Slide the adapters onto the adapter feet. Tighten with bolts M6x35, washers and nuts (fig. 3)
5. Put the awning onto the adapters and secure it with the previously inserted bolts (fig. 4).
6. The vertical adjustment is done with the washers M6 (fig. 5).
7. Before using, make sure the glue can dry for 48H. Whilst the glue is drying, leave the awning open for ± 5 cm in order not to distort the adapters.

## REMARKS


- In order not to damage the vehicle wall, never roll the awning out for more than 0,5 meter without getting the support arms out.
- Check regularly whether the adapters are well fixed to the vehicle.

## OPTION

- Omni-Gutter 3,50m (art.nr. 307947) or 4,50m (art.nr. 307967).

# Adapter Series 6 for Mercedes Sprinter and VW Crafter

Prod.nr. 308073  
6T926-4

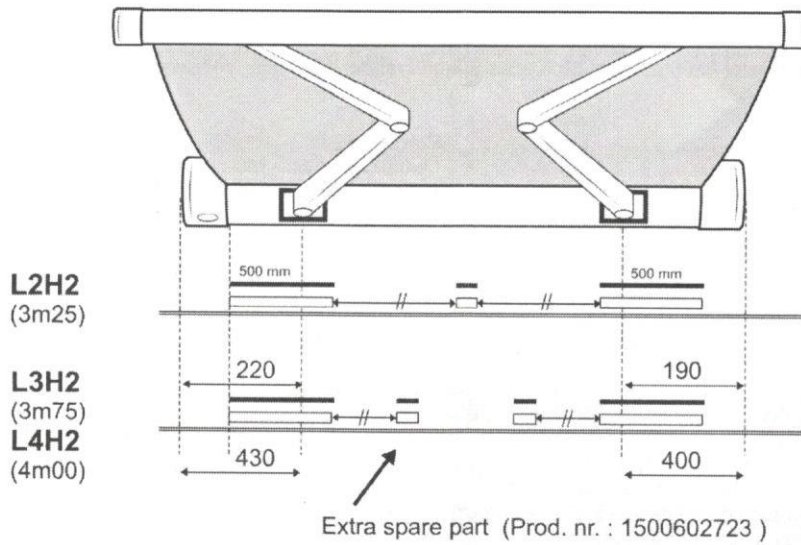

THULE recommends: THULE beveelt aan: THULE empfiehlt:		<b>Prepare / Reinigen / Reinigung:</b> Körabond HG83	10 min
		<b>Glue / Lijmen / Verklebung:</b> SIKA 252 or Terostat MS937	24h

